JETE

WARRANTY CARD and USER MANUAL

WIRELESS SPORT OPENSTYLE

e-Usermanual

IMPORTIR

PT. DORAN SUKSES INDONESIA
Jl. Lebak Jaya 2 Tengah No. 2, Surabaya

CUSTOMER SERVICE
081217393609

jete.id
jeteindonesia
jeteindonesia
jeteindonesia

JETE

USER MANUAL

WIRELESS SPORT OPENSTYLE

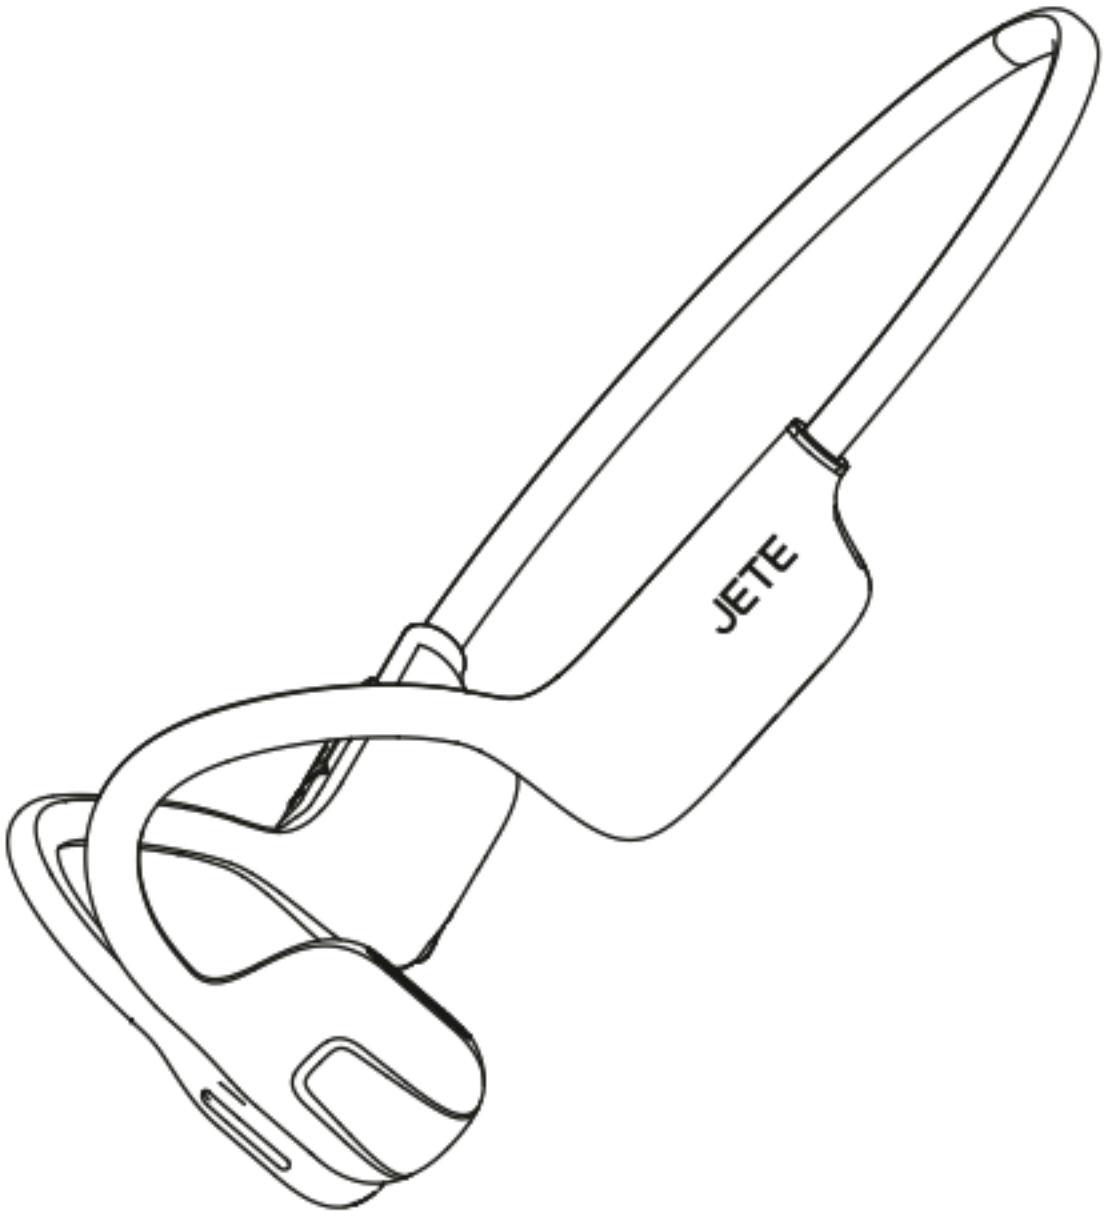

Please read the instructions carefully
before using the product.

Product Introduction :

Thank you for purchasing JETE products. For optimal and safe performance, please read the instructions carefully before using this product.

Package Content :

OPENSTYLE

Strap

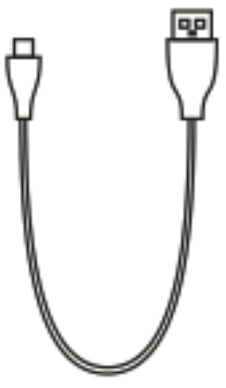

Cable Charging

User Manual

Description Structure Product :

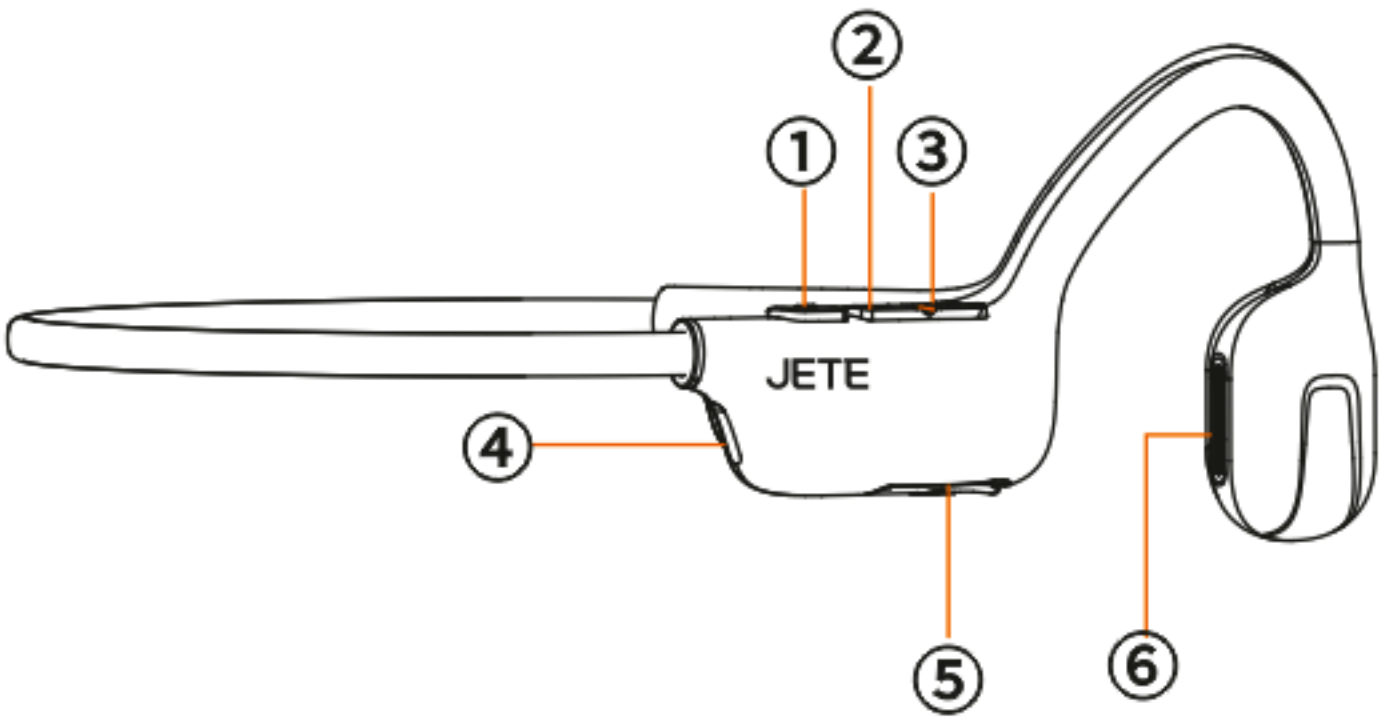

1. Power Button
2. Volume -/Next Song
3. Volume +/Previous Song
4. LED Indikacor
5. Charging Port
6. Speaker

How to use :

How to Turn On the Headset :

Press the power button for 3 seconds the LED indicator will light green then flash white and a sound is heard indicating the headset is successfully turned on.

How to Turn Off the Headset :

Press the power button for 5 seconds, and the LED will flash red 2 times accompanied by a sound signaling the headset is successfully turned off.

How to Connect the Device with Headset :

- When JETE OPENSTYLE Lights up, and the light flashes white, the headset is entering pairing mode.
- Turn on the wireless function on the smartphone, and select "JETE OPENSTYLE" a sound will be heard and the LED indicator will continue to light up, indicating that the device is successfully connected.

Notes :

- The earbuds store previously connected devices. when switched on again the earbuds will try to repeat the connection to the previous device.
- The earbuds will lose connection if the bluetooth distance exceeds the range limit. the earbuds will automatically reconnect when you come back into bluetooth range (10 m) and after 3 minutes.

How to Answer Incoming Call :

- Press 1 times at the power button to answer the call.

Tip : some devices can only answer calls through their own device. Please adjust to the instructions of your device.

How to End a Call

Press 1 times at the power button to end the call

How to Reject a Call :

Press 2 seconds at the power button to reject the call

How to Play Music :

- Play/pause : Press 1 times at the Power button
- Next song : Press 2 Seconds at the Power button
- Previous song : Press 2 Seconds at the Power button
- Decrease Volume : Press 1 times at the - Button
- Indcrease Volume : Press 1 times at the + Button

How to Active Voice Assistant

Press 3 times at the power button active voice assistance

How to Factory Reset

When the device is off, press the power button for 8 seconds until the white indicator flashes 5 times.

How to Charge

1. Please use a charging cable that suits the needs of the device.
2. charge fully when before first use
3. the indicator will be red while charging is in progress, and turn to green when charging is full.

Spesification :

Bluetooth	: V5.3
Type	: Dual Listening Sport Headset
Wireless Range	: 15 m (Without Obstacles)
Mic Sensitivity	: -38dB
Input Voltage/Current	: DC 5V/80mA
Impedance	: 16Ω
Speaker Frequency	: 20 Hz ~ 20 Khz
Playtime	: 15,6 Hour (60% Volume)
Talk Time	: 8.5 Hour (60% Volume)
Standby Time ON	: 36 Hour
Standby Time OFF	: 30 Days
Charging Time	: 2 Hour
Battery Capacity	: 80 mAh

Maintenance :

Please read the following recommendations before using JETE

- Avoid exposing the device to water vapor or humid places. This can affect the internal circuit.
- Do not use cleaning solutions to clean the device.
- Do not expose the device to extreme heat or cold, as this can damage the device or change certain plastic parts.
- Avoid exposing the device to sharp objects, as this can cause scratches and damage.
- Do not disassemble or modify the device.
- Do not drop the device, as this can damage the circuitry.
- Always store the device at room temperature.

How to Warranty Claim JETE Product :

1. All warranty claims can be made at the list of Authorized Outlets listed on the warranty card.
2. Buyers can come to an authorized Outlet or contact Customer Service +62812-1739-3609 if they want to exchange the product online.
3. All expedition shipping costs / product postage are borne by the buyer.
4. When claiming the warranty, the buyer is MANDATORY to show the completeness of the warranty:

- A purchase receipt that clearly states the name of the outlet and the date of the transaction.
- The product must still be within the specified warranty period.
- Warranty card that has been filled out.
- Box / Packing Product.

5. Please inform the constraints / product damage that occurs to our staff.
6. WARRANTY DOES NOT APPLY if USER DAMAGE is found, namely :

- BROKEN, CRACKED, BURNED, DROPPED, MODIFIED BY YOURSELF, SUBMERGED IN WATER.

7. If there are problems during warranty claims or other questions, please contact Customer Service +62812-1739-3609

Terms and Conditions of Warranty :

1. This warranty is valid for 2 years for original JETE products.
2. This warranty is valid for the warranty period stated on the product packaging since the date of sale.
3. During the warranty period, the user is exempt from any replacement costs that may occur.
4. The user must show the warranty card and purchase receipt when applying for a warranty.
5. The warranty applies to functional damage:

- Disfunction.
- Audio not detected.
- Indicator off.
- Battery damage.

6. This warranty DOES NOT APPLY if:

- PRODUCT IS BROKEN, CRACKED, BURNED, FALLEN,
- MODIFIED YOURSELF, SOAKED IN WATER.
- Supporting accessories such as: cables, adapters, etc.
- Abnormal use, not stored properly, natural disasters, modified, or anything intentionally.
- The product has been repaired by a third party.
- The data is not filled in completely by the seller and buyer.
- Damage caused by user error.
- The product warranty period has expired.

2 YEARS WARRANTY

NEW REPLACEMENT FOR ANY FAULTS *T&C

Contact Us

JETE WARRANTY POINTS